

DAEWOO OBDII DTC

P1100	MAP SNSR MAL
P1101	MAP SNSR - RANGE/ PERFORMANCE
P1102	MAP SNSR - LOW INPUT
P1103	MAP SNSR - HIGH INPUT
P1104	AIR FLOW CTRL V/V POS. SNSR
P1105	AIR FLOW CTRL V/V SNSR - PF
P1106	AIR FLOW CTRL V/V SNR-LOW INPUT
P1107	AIR FLOW CTRL V/V SNSR-HI INPUT
P1108	FUEL PUMP
P1109	FUEL PUMP - PERFORMANCE
P1110	FUEL PUMP - STUCK
P1111	FUEL PUMP - ELEC. SYS
P1112	MAP SENSOR
P1113	MDP SNSR - PERFORMANCE MAL
P1114	MDP SNSR -LOW INPUT
P1115	COOLANT TEMP SENSOR SIGNAL
P1116	BOOSTER PRESSURE SNSR - GND/OPEN
P1118	ETS MOTOR MAL
P1119	INLET METERING VALVE CONTROL
P1120	ELEC GOVERNOR MAL
P1121	THROTTLE POS INPUT SIG FAULT
P1122	BOOSTER PRESSURE SNSR - HIGH
P1123	TIMING POS SNSR MAL
P1124	IDLE RATIO (IDLING)-LEAN
P1125	FUEL PRESSURE1 MAL
P1126	FUEL PRESSURE2 MAL
P1127	CTRL SLEEVE POS SNSR MAL
P1128	IDLE RATIO (P /LOAD) - LEAN
P1129	SECOND LOCK SOLENOID MAL
P1130	START SOLENOID MAL
P1131	FUEL CORR RESISTANCE MAL
P1132	LIQUID FUEL SOL. FAULT
P1133	AT FUEL SOLENOID MAL
P1134	O2S (B1 /S1) TRANSITION
P1135	FUEL TIMING SERVO MAL
P1140	INTAKE AIR TEMP. SENSOR
P1141	SLOW DUTY SOL. MAL
P1143	FEED BACK SOL V/V MAL
P1144	FUEL CUT SOL V/V
P1145	MAIN DUTY SOL. MAL
P1146	IDLE CO POTENTIOMET
P1147	ACCEL POS SNSR CT MAL -ETS

P1150	MANIFOLD PRESSURE SENSOR
P1151	ACCEL POS SNSR CT MAL - ECU
P1154	O2S (B2/S1) TRANSITION
P1155	FAIL SAFE VALVE MAL
P1159	VARIABLE INTAKE DEVICE MAL
P1162	HIGH PRSS PUMP / FUEL LINE MAL
P1166	IDLE RATIO TRIM MAL
P1167	O2S (B2)CONT. ADAPTION
P1168	O2S HEATER PWR(B1/S2)
P1169	O2S HEATER PWR(B2/S2)
P1170	BAROMETRIC PRESSURE SNSR FLT
P1171	ETS VALVE STUCK - OPEN
P1172	ETS MOTOR OVER CURRENT
P1173	ETS VALVE PERFORMANCE MAL.
P1174	ETS VALVE STUCK - CLOSED 1
P1175	ETS VALVE STUCK - CLOSED 2
P1176	ETS MOTOR - SHORT /GND 1
P1177	ETS MOTOR - SHORT /GND 2
P1178	ETS MOTOR - SHORT TO BATT
P1179	ETS MAGNETIC POLE - NOT SYNCH
P1180	RAIL PRESSURE CTRL V/V FAULT
P1181	INT. AIR VAR CTL SOL (OPEN/GND)
P1182	INT. AIR VAR CTL SOL (PWR SHT)
P1184	O2S (B1/S2) NO SIGNAL
P1190	THROTTLE ACTUATOR CRCT FAULT
P1191	ETS LIMPHOME VALVE ACTIVATE
P1192	ETS LIMPHOME PERFORMANCE
P1193	ETS LIMPHOME RPM -LOW
P1194	ETS LIMPHOME TPS2 POS. MAL.
P1195	ETS LIMPHOME TARGETDELAY
P1196	ETS LIMPHOME STUCK
P1217	OVERHEAT
P1230	FUEL PUMP RELAY FLT(OPEN/GND)
P1231	FUEL PUMP RELAY FLT(PWR SHT)
P1300	TDC SNSR MAL
P1301	TDC SNSR - RANGE / PF MAL
P1302	TDC SNSR - SIGNAL LOW
P1303	TDC SNSR - SIGNAL HIGH
P1304	PHASE SNSR
P1305	PHASE SNSR - PERFORMANCE MAL
P1306	PHASE SNSR - LOW INPUT
P1307	PHASE SNSR - HIGH INPUT
P1308	IG. COIL 1
P1309	IG. COIL 1 - PF MAL

P1310	IG. COIL 1 - LOW OUTPUT
P1311	IG. COIL 1 - OVER OUTPUT
P1312	IG. COIL 2
P1313	IG. COIL 2 - PF MAL
P1314	IG. COIL 2 - LOW OUTPUT
P1315	IG. COIL 2 - OVER OUTPUT
P1316	IG. COIL 3
P1317	IG. COIL 3 - PF MAL
P1318	IG. COIL 3 - LOW OUTPUT
P1319	IG. COIL 3 - OVER OUTPUT
P1320	IG. COIL 4
P1321	IG. COIL 4 - PF MAL
P1322	IG. COIL 4 - LOW OUTPUT
P1323	IG. COIL 4 - OVER OUTPUT
P1324	PRE - HEATER RELAY MAL
P1325	GLOW RELAY - PERFORMANCE MAL
P1326	GLOW RELAY - STUCK
P1327	GLOW RELAY - ELEC. SYSTEM
P1330	SPARK TIMING ADJUST SIGNAL
P1331	#1 MISFIRE CIRCUIT - OPEN
P1332	#2 MISFIRE CIRCUIT - OPEN
P1333	#3 MISFIRE CIRCUIT - OPEN
P1334	#4 MISFIRE CIRCUIT - OPEN
P1335	#5 MISFIRE CIRCUIT - OPEN
P1336	#6 MISFIRE CIRCUIT - OPEN
P1337	#7 MISFIRE CIRCUIT - OPEN
P1338	#8 MISFIRE CIRCUIT - OPEN
P1341	#1 ION CIRCUIT
P1342	#2 ION CIRCUIT
P1343	#3 ION CIRCUIT
P1344	#4 ION CIRCUIT
P1345	#5 ION CIRCUIT
P1346	#6 ION CIRCUIT
P1347	#7 ION CIRCUIT
P1348	#8 ION CIRCUIT
P1351	#1 MISFIRE CIRCUIT - SHORT
P1352	#2 MISFIRE CIRCUIT - SHORT
P1353	#3 MISFIRE CIRCUIT - SHORT
P1354	#4 MISFIRE CIRCUIT - SHORT
P1355	#5 MISFIRE CIRCUIT - SHORT
P1356	#6 MISFIRE CIRCUIT - SHORT
P1357	#7 MISFIRE CIRCUIT - SHORT
P1358	#8 MISFIRE CIRCUIT - SHORT
P1372	SEGMENT TIME INCORRECT

P1400	EGR SOLENOID
P1401	EGR TEMP. SENSOR
P1405	EGR TEMP. UNCERTAIN
P1415	2 ND AIR INSUFFICIENT(B1)
P1416	2 ND AIR INJECTION
P1418	2 ND AIR INSUFFICIENT(B2)
P1419	2 ND AIR INJECTION V/V
P1420	EGR CONTROL
P1440	CANISTER V/V OPEN / SHORT
P1443	EVAPORATIVE EMISSION
P1458	A/C SW INPUT CIRCUIT
P1476	EXH GAS RCYL SOL FLT (BAT SHT)
P1477	EXH GAS RCYL SOL FLT (GND SHT)
P1478	EXH GAS RCYL SOL FLT (OPEN)
P1500	A/C SWITCH
P1501	BRAKE SWITCH
P1502	IDLE SPEED SWITCH
P1503	ACCEL. SWITCH
P1504	V' CLE SPD SNR FLT(CAN COMMERR)
P1505	KICK DOWN SWITCH
P1506	MPS
P1507	MPS - RANGE / PERFORMANCE MAL
P1508	MPS - SIGNAL LOW
P1509	MPS - SIGNAL HIGH
P1510	ISC V/V CIRCUIT MAL
P1511	IDLE CHARGE ACTUATOR(ELEC)
P1512	IDLE CHARGE ACTUATOR(MECHA)
P1513	IDLE CHARGE ACTUATOR(FUNC FLT)
P1514	FLUID TEMP. SNSR CIRCUIT
P1515	FLUID TEMP. SNSR CT-PF MAL
P1516	FLUID TEMP. SNSR CT-SIG. LOW
P1517	FLUID TEMP. SNSR CT-SIG. HIGH
P1520	ALTERNATOR FIELD COIL SIG MAL
P1521	PWR STEERING SW MAL
P1522	BATTERY FAULT
P1525	APS / BOOSTER PRSS SNSR PWR
P1526	SENSOR SUPPLY PWR 1 FAULT
P1527	SENSOR SUPPLY PWR 2 FAULT
P1529	TCU MIL REQUEST SIGNAL
P1530	MAX. VEHICLE SPEED LIMIT FLT
P1537	A/C RELAY CRCT FLT(PWR SHORT)
P1538	A/C RELAY CRCT - OPEN /GND SHORT
P1545	A/C COMPRESSOR SW OPEN/SHORT
P1552	ISC ACTUATOR(CLOSE) - SHORT

P1553	ISC ACTUATOR(CLOSE) - OPEN
P1555	IDLE CO POTEN. OPEN / SHORT
P1569	PRESSURE CTRL V/V CURRENT FLT
P1593	VICS VALVE
P1600	ECU K LINE MAL (SERIAL COMM)
P1601	ECU L LINE MAL
P1602	ECU - TCU COMM MAL
P1603	ECU - TCS COMM LINE MAL
P1604	TPS COMM MAL
P1605	VACUUM SOLENOID V/V
P1606	VACUUM SOLENOID V/V -PF
P1606	TCM FAULT(RESET CUNTER CRCT)
P1606	TCM FAULT(RESET CUNTER CRCT)
P1607	VACUUM SOLENOID V/V - STUCK
P1608	VACUUM SOL V/V ELEC. SYSTEM
P1609	VENTILATION SOL V/V
P1610	MAIN RELAY CRCT FLT (PWR SHORT)
P1611	MAIN RELAY CRCT (OPEN/GND SHT)
P1612	VENTILATION SOL V/V -ELEC. SYS
P1613	ECU SELF DIAGNOSIS MAL
P1614	ETS ECU MAL
P1616	MAIN RELAY MAL
P1617	MIL
P1619	MAIN RELAY
P1620	A/C RELAY
P1621	FUEL CUT VALVE MAL
P1622	A/C CONTROL CIRCUIT MAL
P1623	MIL OPEN / SHORT
P1624	RADIATOR FAN MAL
P1625	A/C FAN MAL
P1626	IMMOBILIZER INDICATOR LAMP
P1628	VAPORIZE LAMP MAL
P1629	GLOW LAMP FAULT
P1630	TCU COMM. LINE MAL
P1631	ECU COMM. LINE MAL
P1632	TCS SYSTEM MAL
P1633	IMMO. LAMP FAULT
P1634	CRUISE LAMP FAULT
P1635	WTS HEATER RELAY FAULT
P1638	ECU MICOM CRCT FAULT
P1639	ECU (MICOM) CRCT FAULT
P1640	VI MOTOR COIL 1 OPEN/SHORT
P1641	VI MOTOR COIL 2 OPEN/SHORT
P1642	SERIAL COMM. ERROR - NONIMMOB

P1645	INJECTOR DRIVING VOLTAGE FLT
P1647	OVER VOLTAGE
P1650	ENG FIX INDC LAMP CT (PWR SHT)
P1651	ENG FIX INDC LAMP CT(OPEN/GND)
P1652	IGNITION SW FAULT
P1653	FUEL CUT FLT AFTER ENG OFF
P1655	ECU INTERNAL FAULT
P1660	CRUISE CRCT FAULT
P1671	CAN COMM FLT - TCU MODL SIG INDC
P1672	CAN COMM FLT(CAN BUS OFF)
P1673	CAN COMM FLT(SIGNAL ERR)
P1674	A/C FAN RELAY
P1690	WATER HEATER RELAY
P1697	C/F RELAY(LOW SPEED)
P1698	C/F RELAY(HIGH SPEED)
P1699	MAIN RELAY
P1700	A/T GEAR SHIFT MAL
P1701	THROTTLE POS. SNSR CIRCUIT
P1701	COOLANT TEMP.SENSOR SIGNAL
P1702	TPS CIRCUIT - RANGE /PF MAL
P1702	ENGINE TORQUE SIGNAL
P1703	TPS -OPEN/GROUND
P1704	TPS -HIGH INPUT
P1706	INHIBITOR SWITCH
P1707	BRAKE SWITCH
P1708	ACCEL. SWITCH
P1709	KICK DOWN SWITCH
P1710	FULID TEMP. SNSR CIRCUIT
P1710	TIMING SOL.-ELECTRICAL MAL.
P1711	FLUID TEMP. SNSR CT-PF MAL
P1712	FLUID TEMP. SNSR CT-LOW INPUT
P1713	FLUID TEMP. SNSR CT-HIGH INPUT
P1714	IDLE SPEED SWITCH
P1715	A/C SWITCH
P1716	STEERING SNSR
P1717	STEERING SNSR - PERFORMANCE MAL
P1718	STEERING SNSR -LOW INPUT
P1719	STEERING SNSR - HIGH INPUT
P1721	CONTROL RELAY
P1722	CONTROL RELAY - PERFORMANCE
P1723	CONTROL RELAY - STUCK
P1724	CONTROL RELAY - ELEC. SYSTEM
P1725	TOD CTRL UNIT(CHECKSUM) FAULT
P1726	THROTTLE POS INPUT SIG MISS

P1727	THROTTLE POS INPUT SIG FAULT
P1728	EMC COIL - OPEN / PWR SHORT
P1729	EMC COIL - GND SHORT
P1730	FRT SPEED SNSR INPUT SIG LOW
P1731	FRT SPEED SNSR INPUT SIG HIGH
P1732	REAR SPEED SNSR INPUT SIG LOW
P1733	REAR SPEED SNSR INPUT SIG HIGH
P1734	SPEED SNSR STD VOLT LOW INPUT
P1735	SPEED SNSR STD VOLT INPUT HIGH
P1736	SHIFT MOTOR - OPEN
P1737	SHIFT MOTOR - SHORT
P1738	SHIFT SYSTEM FAULT
P1739	POS ENCODER FAULT
P1740	SHIFT MOTOR (POS1) -GND SHORT
P1741	SHIFT MOTOR (POS2) - GND SHORT
P1742	SHIFT MOTOR (POS3) - GND SHORT
P1743	SHIFT MOTOR (POS4) - GND SHORT
P1744	LOCKUP CLUTCH SYSTEM
P1745	TCU K LINE
P1746	TCU L LINE
P1747	TCU - ECU COMM LINE #1 MAL
P1748	TCU - ECU COMM LINE #2 MAL
P1749	SERIAL COMM. - OPEN/GND
P1750	TPS COMM MAL
P1751	AUTO CONTROL RELAY -MAL.
P1752	'P' SHIFT POS. INDIC. LAMP
P1753	'R' SHIFT POS. INDIC. LAMP
P1754	'N' SHIFT POS. INDIC. LAMP
P1755	'D' SHIFT POS. INDIC. LAMP
P1756	'3' SHIFT POS. INDIC. LAMP
P1757	'2' SHIFT POS. INDIC. LAMP
P1758	'L' SHIFT POS. INDIC. LAMP
P1759	ECU MEM. CHECKSUM MAL
P1760	ECU PROGRAM MAL
P1761	ECU KEEP ALIVE MEM. MAL
P1762	ECU RAM MAL
P1763	ECU BOM MAL
P1764	TCU CAN COMM. CONTROL MAL
P1765	TORQUE REDUC. SIG. CT MAL
P1766	TORQUE REDUC. SIG. CT MAL
P1771	GEARSHIFT POS. SENSOR MAL
P1772	GEARSHIFT POS. SENSOR MAL
P1773	GEAR BOX RPM SNSR MAL
P1774	CRC SENSOR MAL

P1775	TCU MAL
P1776	POWER CONTROL UNIT MAL
P1777	POWER CONTROL UNIT - OUTPUT MAL
P1778	ELECTRONIC V/V MAL
P1779	START RELAY MAL
P1779	ENGINE TORQUE SIGNAL FAULT
P1780	PUSH - PULL SENSOR MAL
P1780	ENG TORQUE SIG ERR(CAN COMM)
P1781	ACTUATOR MAL
P1782	ACTUATOR POS. SENSOR MAL
P1786	ENGINE RPM OUTPUT CIRCUIT
P1787	HYDRO SYSTEM MAL
P1790	TCM CHECKSUM FAULT
P1791	THROTTLE OPEN DUTY FAULT
P1795	GROUND RETURN CIRCUIT ABNORMAL
P1813	T/M OIL TEMP SNSR CRCT FAULT
P1839	EDS 3 DRV CRCT GND SHORT
P1840	EDS 3 DRV CRCT BATT SHORT
P1841	EDS 3 DRV CRCT OPEN
P1850	SOL.1 DRV GND SHORT
P1851	SOL.1 DRV BATT PWR SHORT
P1852	SOL.1 DRV CRCT OPEN
P1853	SOL.2 DRV GND SHORT
P1854	SOL.2 DRV PWR SHORT
P1855	SOL.2 DRV CRCT OPEN
P1861	EDS 4 DRV CRCT GND SHORT
P1862	EDS 4 DRV CRCT BATT SHORT
P1863	EDS 4 DRV CRCT OPEN
P1864	EDS 5 DRV GND SHORT
P1865	EDS 5 DRV CRCT BATT SHORT
P1866	EDS 5 DRV CRCT OPEN
P1867	EDS 6 DRV GND SHORT
P1868	EDS 6 DRV CRCT BATT SHORT
P1869	EDS 6 DRV CRCT OPEN
P1870	SOL/EDS PWR SPL(GND SHT/OPEN)
P1871	SOL/EDS PWR SPL(BATT SHORT)
P1873	SOL/EDS PWR SPL(GND SHT/OPEN)
P1874	SOL/EDS PWR SPL(BATT SHORT)
P1881	2-1 GEAR SHIFT FAULT
P1883	3-2 GEAR SHIFT FAULT
P1884	4-3 GEAR SHIFT FAULT
P1885	3-1 GEAR SHIFT FAULT
P1886	4-2 GEAR SHIFT FAULT