

DAIHATSU OBD II DTC

P1105	Barometric pressure sensor
P1120	G sensor open or short circuit
P1121	G sensor characteristic abnormal
P1124	TPS(self learn)
P1125	Throttle motor open circuit
P1127	Throttle motor power supply open circuit
P1128	Throttle valve stuck&dirty block
P1129	Emergency home abnormal 1
P1131	Emergency home abnormal 2
P1132	Air flow abnormal when Emergency home active
P1133	Rear bump device abnormal
P1140	Throttle motor drive circuit fault, short circuit
P1180	G sensor 2 open or short circuit
P1346	VVT control (Valve timing fail)
P1349	VVT control(Advance;øretard angle fail)
P1402	TPS 2 open or short circuit
P1403	TPS output abnormal
P1510	Starter signal
P1520	Switch signal system
P1530	A/C evaporator temperature sensor
P1600	Keyless communication(ECU abnormal)
P1601	Keyless communication(code disaccord;øcommunication error)
P1602	Communicate with A/T system
P1602	EFI communication malfunction
P1632	Boost sensor circuit abnormal
P1633	ECU emergency home circuit abnormal
P1634	EFI(main)CPU abnormal
P1636	System voltage low
P1638	ETC CPU abnormal
P1640	EFI-ETC CPU communication error
P1643	Motor power supply circuit abnormal
P1649	Electrical throttle system error
P1650	G sensor input circuit abnormal(A/D)
P1651	TPS input circuit abnormal(A/D)
P1656	OCV control abnormal
P1670	Standard RAM abnormal(EFI)
P1671	Standard RAM abnormal(ETC)
P1703	Lock up speed disaccord
P1704	Shift gear SW circuit short
P1705	Shift UP/DOWN SW circuit short
P1711	TPS signal abnormal
P1721	Engine torque signal abnormal

P1780 N start SW(Multiple)
P1780 SW solenoid circuit open/short
P1781 N start SW(no input)
P1786 Transmission range sensor signal abnormal
P1787 Transmission range sensor (LOW)
P1788 Transmission range sensor(HIGH)
P1789 Transmission range sensor no learn
P1805 CVT-EFI communication error
P1805 E/G ECU communication input system open
P1806 E/G ECU communication input data abnormal
P1807 DC motor abnormal
P1808 DC motor short
P1809 DC motro lock
P1812 Electromagnitism clutch circuit open
P1813 Electromagnitism clutch circuit open/short
P1814 Strap slip or position sensor fixed
P1820 Main RPM sensor
P1825 Sub RPM sensor