

ISUZU OBDII DTC

P1106	Manifold Absolute Pressure Sensor Circuit Intermittent High Input
P1107	Manifold Absolute Pressure Sensor Circuit Intermittent Low Input
P1111	Intake Air Temperature Sensor Circuit Intermittent High Input
P1112	Intake Air Temperature Sensor Circuit Intermittent Low Input
P1114	Engine Coolant Temperature Sensor Circuit Intermittent Low Input
P1115	Engine Coolant Temperature Sensor Circuit Intermittent High Input
P1121	Throttle Position Sensor Circuit Intermittent High Input
P1122	Throttle Position Sensor Circuit intermittent Low Input
P1133	HO2S Bank 1 Sensor 1 Insufficient Switching (Bank 1 Sensor 1)
P1134	HO2S Bank 1 Sensor 1 Transition Time Ratio (Bank 1 Sensor 1)
P1153	HO2S Bank 2 Sensor 1 Insufficient Switching (Bank 2 Sensor 1)
P1154	HO2S Bank 2 Sensor 1 Transition Time Ratio (Bank 2 Sensor 1)
P1171	Fuel System Lean During Acceleration
P1336	Crankshaft Position System Not Learned
P1345	Crankshaft Position - Camshaft Position Correlation
P1351	Ignition Coil Control Circuit High Input
P1361	Ignition Coil Control Circuit Low Input
P1380	Misfire Detected - Rough Road Data Not Available
P1381	Misfire Detected - No Communication with ABS Module
P1390	G-Acceleration Sensor Intermittent Low Input
P1391	G-Acceleration (Low G) Sensor Performance
P1392	Rough Road G-Sensor Circuit Low Input
P1393	Rough Road G-Sensor Circuit High Input
P1394	G-Acceleration Sensor Intermittent High Input
P1404	EGR Closed Position Performance
P1406	EGR Valve Pintle Position Sensor Circuit Fault
P1415	Secondary Air Injection System (Bank 1)
P1416	Secondary Air Injection System (Bank 2)
P1441	EVAP System Flow During Non-Purge
P1442	EVAP System Flow During Non-Purge
P1508	Idle Speed Control System - Low RPM
P1509	Idle Speed Control System - High RPM
P1618	Serial Peripheral Interface Communication Error
P1621	Vehicle Control Module Long Term Memory Performance
P1626	Vehicle Theft Deterrent Fuel Enable Signal Not Received
P1631	Theft Deterrent Start Enable Signal Not Correct
P1632	Theft Deterrent Fuel Disable Signal Received
P1640	Output Driver Module 'A' Fault
P1790	VCM ROM (Transmission Side) Check Sum Error
P1792	VCM EEPROM (Transmission Side) Check Sum Error
P1835	Kick Down Switch Always On
P1850	Brake Band Apply Solenoid Electrical Fault

P1860 TCC PWM Solenoid Electrical Fault
P1870 Transmission Component Slipping