

OPEL OBDII DTC

P1100	Mass air flow (MAF) sensor/manifold absolute pressure (MAP) sensor - implausible signal
P1105	Barometric pressure (BARO) sensor - circuit malfunction
P1110	Intake manifold air control solenoid 1 - circuit malfunction
P1111	Intake manifold air control solenoid 2 - circuit malfunction
P1120	Throttle position (TPS) sensor/manifold absolute pressure (MAP) sensor - implausible signal /Accelerator pedal position (APP) sensor A - circuit malfunction
P1122	Accelerator pedal position (APP) sensor B - circuit malfunction
P1125	Turbocharger (TC) wastegate regulating valve - circuit malfunction
P1130	Heated oxygen sensor (HO2S) 1, bank 1 - malfunction
P1170	Mixture control (MC), bank 1 - malfunction
P1171	Mixture control (MC), engine under load - mixture lean
P1173	Engine overheat protection activated - engine temperature above limit
P1180	Fuel temperature sensor, in injection pump - malfunction
P1195	Engine oil pressure switch - malfunction
P1201	Injector needle lift sensor - circuit malfunction
P1220	Fuel quantity adjustment control - malfunction
P1229	Engine control relay - voltage high
P1230	Engine control relay - voltage low
P1231	Fuel pump relay
P1300	Fuel tank - empty
P1326	Knock control, cylinder 1 - control limit reached
P1327	Knock control, cylinder 2 - control limit reached
P1328	Knock control, cylinder 3 - control limit reached
P1329	Knock control, cylinder 4 - control limit reached
P1335	Fuel injection pump control module - CKP signal missing
P1345	Injection pump position sensor - malfunction
P1372	Crankshaft position (CKP) sensor - malfunction
P1404	Exhaust gas recirculation (EGR) valve - range /performance problem
P1405	Exhaust gas recirculation (EGR) valve position sensor -malfunction
P1410	Secondary air injection (AIR) pump relay - circuit malfunction
P1481	Engine coolant blower motor relay 1 - malfunction
P1482	Engine coolant blower motor relay 2 - malfunction
P1483	Engine coolant blower motor relay 3 - malfunction
P1500	Electronic throttle system (ETS) - circuit malfunction
P1501	Immobilizer control module - program error
P1502	Immobilizer control module - no signal)
P1503	Immobilizer control module - incorrect signal
P1508	Idle air control (IAC) valve - circuit malfunction
P1509	Idle air control (IAC) valve - circuit malfunction
P1510	Closed throttle position (CTP) switch - circuit malfunction
P1515	Idle air control (IAC) valve - circuit malfunction

P1520 Electronic throttle system (ETS) - supply voltage
 P1523 Electronic throttle system (ETS) - malfunction
 P1525 Electronic throttle system (ETS), limp home position - malfunction
 P1526 Electronic throttle system (ETS), adaptation - malfunction
 P1530 AC cut-off relay - circuit malfunction
 P1540 AC refrigerant pressure sensor - circuit malfunction
 P1546 AC compressor clutch, signal - circuit malfunction
 P1550 Electronic throttle system (ETS) - in emergency mod
 P1551 Electronic throttle system (ETS), engine torque monitoring continuously above limit
 P1555 Throttle position (TP) sensor A/mass air flow (MAF) sensor - implausible signal
 P1560 System voltage, battery - out of limits
 P1571 Brake pedal position (BPP) switch - circuit malfunction
 P1572 Engine control module (ECM)/Immobilizer control module - no Immobilizer signal
 P1573 Engine control module (ECM)/Immobilizer control module - incorrect Immobilizer signal
 P1600 Engine control module (ECM) - program error
 P1601 Module temperature switch, ECM - temperature high
 P1602 Knock control - RAM malfunction
 P1604 Engine control module (ECM) - defective
 P1605 Engine control module (ECM) - coding
 P1606 Engine control module (ECM) - defective
 P1610 Immobilizer control module - program error
 P1611 Immobilizer control module - incorrect security code entered
 P1612 Immobilizer control module - no/incorrect signal
 P1613 Immobilizer control module - no/incorrect signal
 P1614 Immobilizer control module - incorrect signal
 P1615 Immobilizer control module/multifunction control module communication - incorrect code
 P1616 Immobilizer control module/instrumentation control module communication - incorrect code
 P1618 Engine control module (ECM) - malfunction
 P1620 Engine control module (ECM), supply voltage - out of limits
 P1621 Engine control module (ECM) - defective
 P1622 Fuel pump relay
 P1625 Engine control module (ECM) - malfunction
 P1631 Fuel injection pump control module - defective
 P1635 Engine control module (ECM) - defective
 P1640 Engine control module (ECM), MIURPM/fuel consumption signal(s) - circuit malfunction
 P1650 Malfunction indicator lamp (MIL) - circuit malfunction
 P1651 Fuel injection pump control module, CAN data bus- malfunction
 P1660 Fuel shut-off solenoid - circuit malfunction
 P1690 Malfunction indicator lamp (MIL) - circuit malfunction
 P1694 Glow plug warning lamp - circuit malfunction

P1700 Transmission control module (TCM) - service request signal
P1705 Park/neutral position (PNP) switch - incorrect signal
P1725 Injector needle lift sensor - incorrect signal
P1740 AT torque control, signal - malfunction
P1743 Torque converter clutch - vibration
P1760 System voltage, ignition - out of limits
P1780 Throttle position (TP) sensor, traction control - circuit malfunction
P1781 CAN data bus, ECM actual torque signal - malfunction detected
P1790 CAN data bus, ECM/TCM communication - malfunction detected
P1792 CAN data bus, ECM/TCM communication - malfunction detected
P1800 System voltage, ignition - out of limits
P1813 AT torque control, signal - malfunction
P1835 Transmission kick-down switch - circuit malfunction
P1842 Throttle position (TP) sensor signal out of range
P1843 Engine coolant temperature (ECT) sensor - signal out of range
P1844 Engine control module (ECM), torque control - signal out of range
P1845 Transmission ratio monitor - circuit malfunction/ AT torque control, signal - malfunction
P1847 Transmission control module (TCM), multiplexing - no signal
P1850 Shift solenoid (SS) 'C', band apply - circuit malfunction
P1860 Torque converter clutch (TCC) solenoid - circuit malfunction
P1870 Torque converter clutch (TCC) - inoperative
P1890 Throttle position (TP) sensor - circuit malfunction /CAN data bus, ECM/TCM communication - malfunction detected
P1895 Engine control module (ECM), actual torque signal - circuit malfunction